
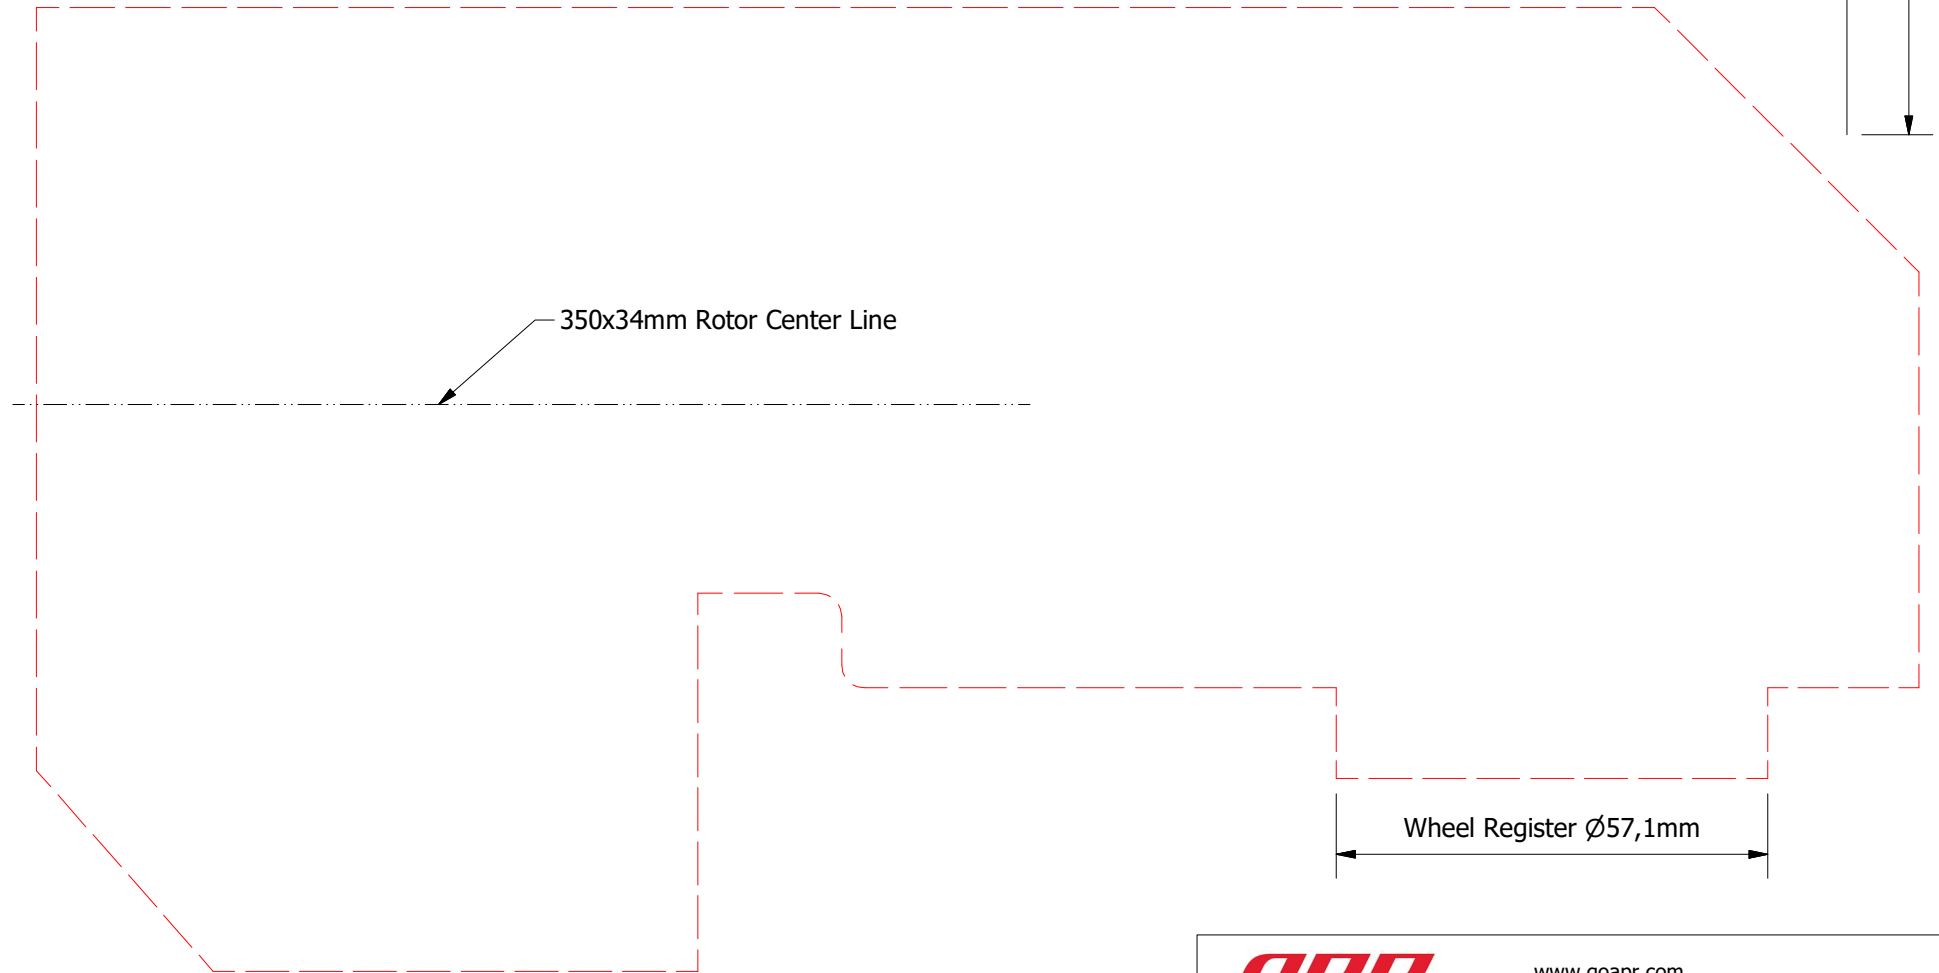


**How to use this template:**

1. Stick this page onto a thin piece of cardboard.
2. Cut along the red dashed line. This is a 0.1" clearance gap for the brake system to fit under the wheel.
3. Fit the "Stock Wheel Register" section into your wheel's spigot hole.
4. The dashed line must clear the wheel spokes to ensure sufficient clearance for the brake system.

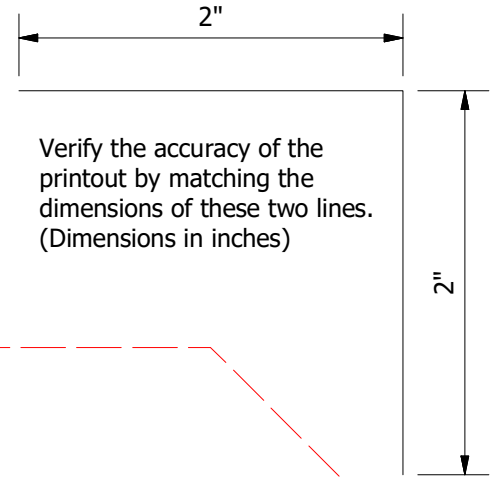

**Printing Notes:**  
Set printer options to "Actual Size" (no scaling),  
and paper size must be set to Landscape

<b>APR</b>		www.goapr.com	
CALIPER: 6-Piston Type A		AXLE: FRONT	
DISC: 350x34mm		VEHICLE:	
DATE: 2016/11/14			VW Golf 7 GTI / Audi A3